

# Standard Kuranda Dog Bed Assembly Instructions

## Parts List:

- 1 Fabric (40oz Vinyl or Ballistic Nylon).
- 4 Pieces of plastic cording (Ballistic Nylon fabric).
- 2 Long Standard frame pipes.
- 2 Short Standard frame pipes.
- 4 Standard legs and 4 leg caps.
- 4 Top corners and 4 bottom corners.
- 1 Hardware kit (8 bolts and 8 nuts).

## Tools Needed:

- Phillips Head Screwdriver.
- 7/16" Wrench, Pliers or Adjustable Wrench.




1. Lay fabric flat with underside facing upwards. When using the ballistic nylon fabric you are required to manually slot the cording into the fabric sleeves. This step is not required for the 40oz vinyl fabric as the cording is already encased into the vinyl sleeves.



2. Using the 2 short frame pipes and 2 long frame pipes. Insert fabric sleeves into the channel of each length of pipe.



3. Position one top corner underneath the frame and insert bolts through the fitting and frame. (Ensure frame is flush against the corner grooves to prevent assembly issues further on). Repeat process on further 3 corners.

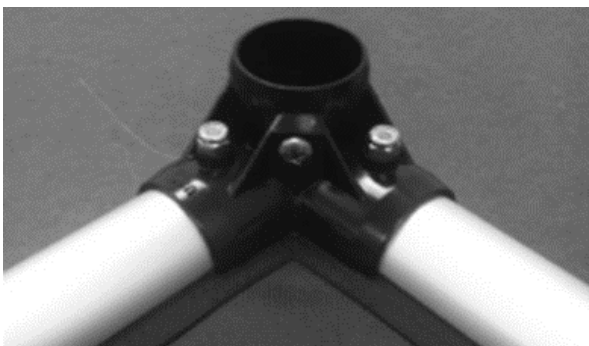

4. Position one bottom corner on the top half of the frame and guide bolt ends through the bottom corner holes. Secure each bolt with nuts but do not tighten all the way. Repeat process on further 3 corners.



5. Insert leg caps into legs and then insert legs into each bottom corner. Repeat process on further three legs. Once completed turn bed upright and fully tighten nuts and bolts.



DO  
Correctly tightened.  
nut is flush with bolt



DONT  
Nut is too tight and  
extends beyond edge  
of bolt

#### PRODUCT ADVISORY:

Please be aware that over tightening the nuts located on the corners of the beds can cause enough added stress that the corner pieces may fail. To maximize the life of the corner fittings, the bolt end should be flush with the nut. Periodically check hardware to prevent indigestion hazards to dogs.

#### CLEANING:

Bleach and chlorine-based cleaning solutions are not recommended. Damage of Kuranda beds due to caustic cleaners is not covered under warranty. It is recommended to use warm soapy water and hose down or pressure clean the Kuranda beds.

#### ONE YEAR CHEW PROOF WARRANTY:

We guarantee the structural integrity of each of our Kuranda dog beds for a period of one year from the original date of purchase of the bed. If your dog is able to damage any part of the frame or fabric by chewing beyond usability, we will send out replacement parts free of charge. Cosmetic damage and any damage caused by persistent scratching/digging is not covered under the 1 year chew proof warranty.



Unit 4, 26 Commercial Drive,  
Ashmore QLD 4214  
Tel: 1800 251 766  
Fax: +61 (0)7 5657 6788  
info@therian.com.au  
[www.therian.com.au](http://www.therian.com.au)